

Ensure360 Headend

The Ensure360SM Headend is the powerhouse of the system by bringing all of the pieces of the system together to generate and distribute alarm information. The Director, Primary Aware console, and UPS all connect to the Headend to provide data from around the system. Headend also connects the Ensure360 system to the internet for features such as cloud-based reporting.

To ensure the Headend stays powered in the event of power loss, the 360 UPS will continue providing power until the batteries are depleted, expected run time is about 1 hour. When the 360 UPS loses AC power or gets low on battery, an alarm will be created on Ensure360.

Part numbers:

- 360 Headend - Ensure360 Server
- 360 UPS - Battery backup for Ensure360 Server



Specifications:

Rack size: 1U per device (2U total)

PSUs: 2