


SCS02 PUSH BUTTON CALL STATION

The SCS-02 is a surface mounted emergency call touch pad station. It mounts directly to the wall or can cover a single gang opening. A red “PRESS FOR HELP” push pad is used to activate an alarm and a gray check mark push pad is pressed to restore the alarm. An EN1941 wireless transmitter is included. The touch pad call station is durable and easy to clean.

The SCS-02 can also function as a Courtesy Check-In switch as well. The restore button can serve two functions, restoring alarms when the emergency call touch pad has been pressed or activating Courtesy Check-In if the emergency call touch pad has not been pressed.

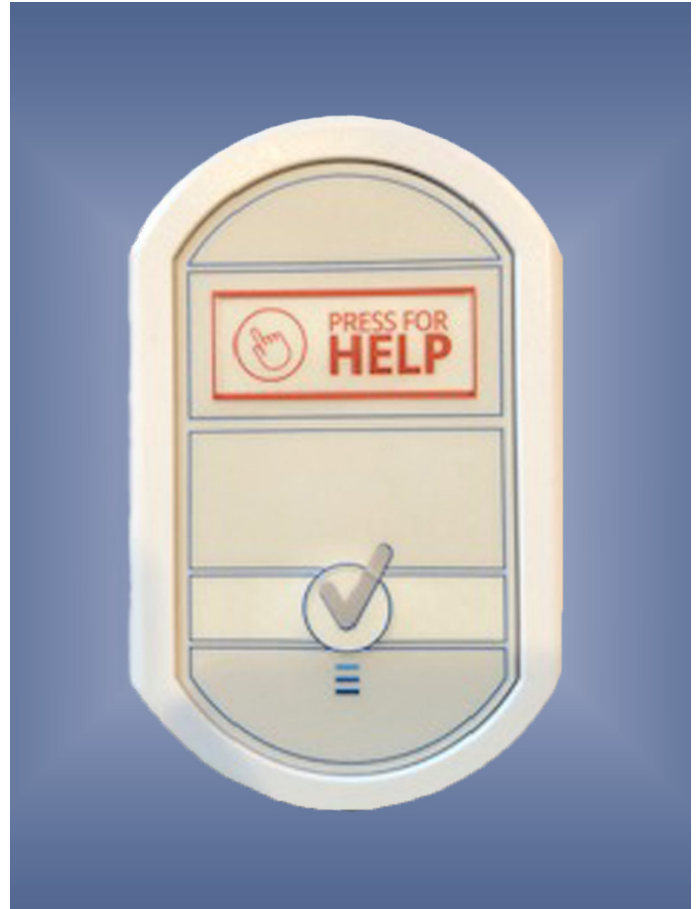

Specifications:

Dimensions: 3.25" L x 1.2" W x 5" H

Switch: Momentary push pad